Output Export File Types

Options · https://mes100.com/docs/output-export-format/

The output exported from MiTS are not only limited to DWG or png and users may change the file types accordingly under the Project Parameters.


The default file types for each of the output in the software is as per below;



Changing Exported File Types

To change the exported file types, users may go to;


Options > Project Parameters > Export Formats > Click the dropdown for each output (i.e. Drawings) > Choose the file type > Click OK

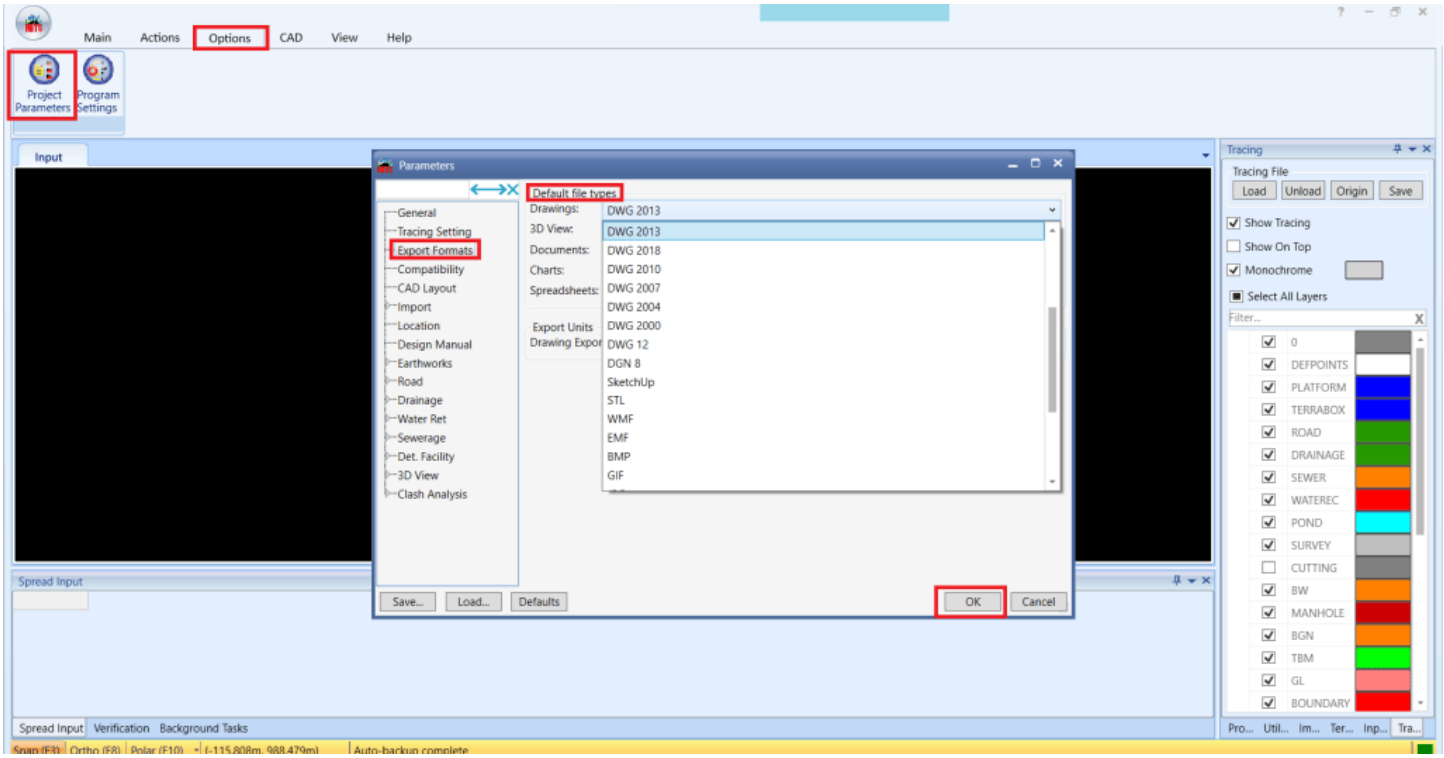

OR

Users can also change the file type during the export directly as per below;

Click Export > Change the 'Save as type' > Click Save

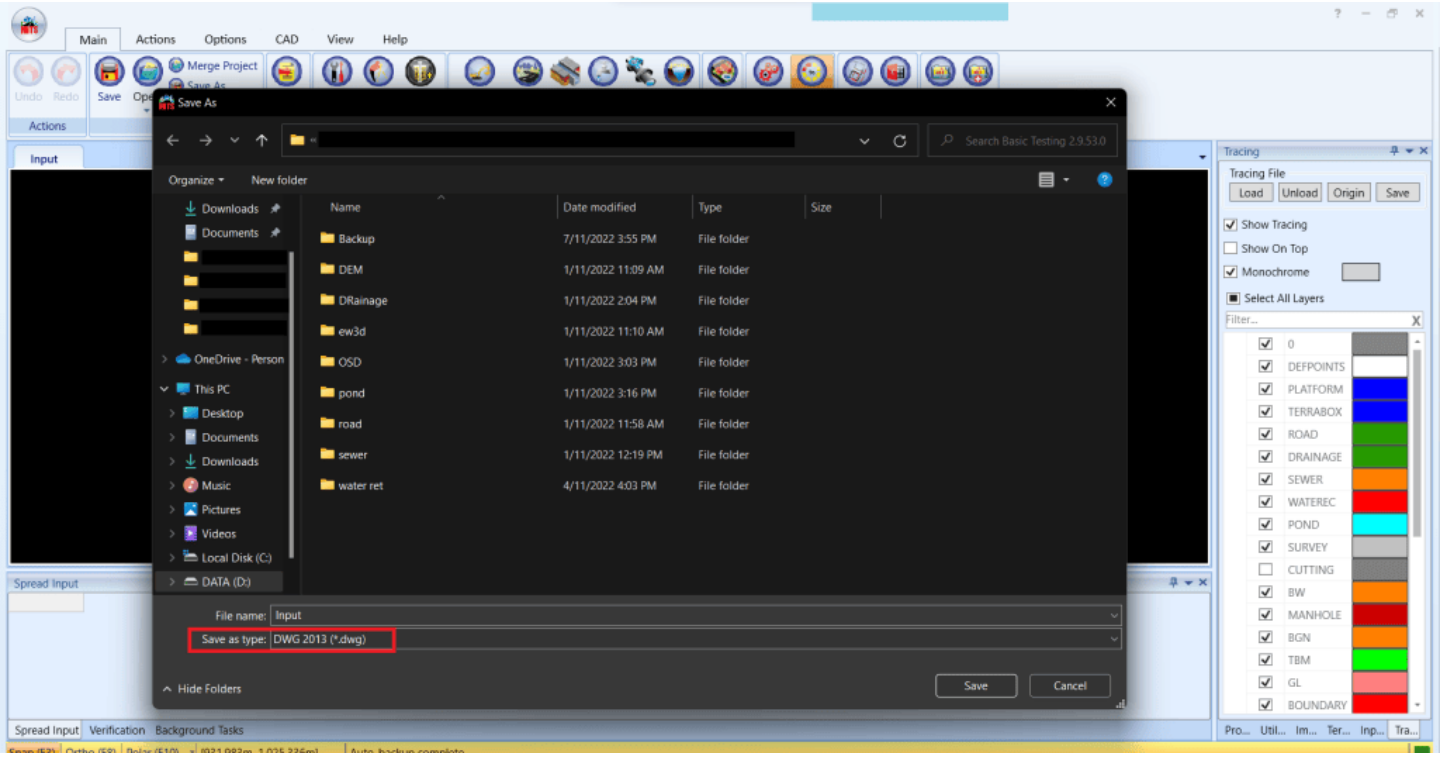

Related



Ngu Soon Hui

I'm the Benevolent Dictator for Life for MiTS Software cum Editor of this website. Read more here.

You can also contact me at soonhui@mes100.com